Sedum Supply
EXPERTS IN GREEN ROOF SYSTEMS

Fitting Guidelines
Wildflower Boxes

Fleece Layer

Our fleece is a non-woven, recycled polyester geotextile fabric, used underneath our Wildflower Box Green Roof System.

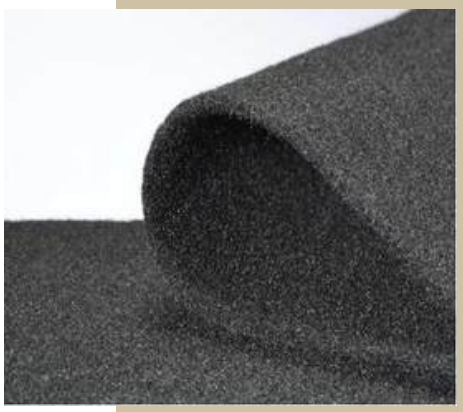

It is installed as a roof protection, filtration and separation layer between the wildflower box and the waterproofing membrane.

The recycled polyester material is available in 300 gsm density and should be loose laid over the waterproofing / insulation / deck surface before installation of the green roofing boxes.

Fleece Layer Fitting

- Simply cut to the desired length and loose lay over existing roof covering, allowing for upstands and overlaps.
- Overlap the sheets by at least 10cm at each joint.

Sedum Supply
EXPERTS IN GREEN ROOF SYSTEMS

Fitting Guidelines

Capillary Matting

Our capillary matting is 100% recycled (sterilised) wool fibre to be used underneath our Wildflower Roof Box System.

It is installed as a water source retention and separation layer between the Wildflower Box and the waterproofing membrane holding 5 litres per m2.

The 100% recycled (sterilised) wool fibre is 8-9mm thick and should be loose laid over the waterproofing / insulation / deck surface before installation of the green roofing boxes.

Capillary Matting Fitting

- Simply cut to the desired length and loose lay over existing roof covering, allowing for upstands and overlaps.
- Overlap the sheets by at least 10cm at each joint.

Sedum Supply
EXPERTS IN GREEN ROOF SYSTEMS

Fitting Guidelines

Wildflower Boxes

When you have enough matting rolled out, start laying the boxes and interlock them ‘male to female side’ by spinning each at 45 degrees. They will easily slot together.

Cutting Wildflower Boxes

- Carefully empty contents onto a board slightly bigger than the box, by placing the board on top of the tray and inverting - then slowly and carefully lift off the tray leaving all the inside contents intact. Leave to one side.
- Work out where the plastic tray needs to be cut and either use a wood saw, or mini battery-operated angle grinder.
- Once cut, put both pieces back over the contents, invert again, and use the saw to cut the sedum through the cut gap. You can butt the cut edge up against another tray or use strong tape (gaffer tape) to bind the bare edge, effectively creating a new side.
- This way the offcut is not wasted and will come in for another area.

Wildflower box base

Notes: When ordering, try and use full trays and use pebbles to fill the gaps reducing the need for cuts, which reduces waste.

Please contact the our team at any point if you need help with quantities and design etc